

Installation Instructions

Foam Tape Method

Step 1 Position sign on wall and confirm it is level and ADA compliant.

Step 2 Apply painters tape between wall and sign bottom.

Step 3 Holding sign in desired location, draw a line along sign bottom and edge.

Step 4 Apply a small circle of silicone to sign back and remove foam tape paper.

Step 5 Holding sign at an angle off the wall, align bottom to lines drawn in step 3 and push sign against wall. Hold for 10 seconds.


Step 6 Admire your work (briefly...) then install your next sign!



Step 1



Step 3

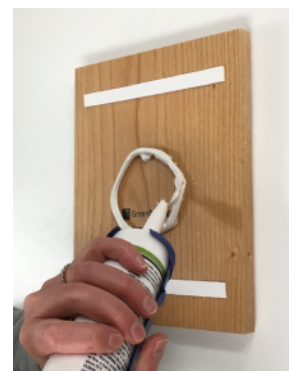

Step 4



Step 5